


Your New Vanity Unit

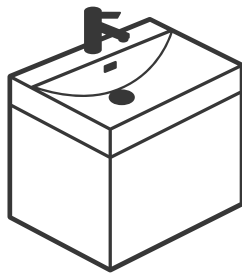

Installation



Heat Protection

Ensure that you install the vanity unit at least 300mm away from a heated towel rail or radiator to safeguard it from warping.

Sunlight

Direct sunlight on the surface of matt or dark finish vanity units can cause bleaching, so it's best to install your unit with this in mind. If you want to double check details on vanity unit placement, you can chat to us on our website.

Aftercare



Looking After Your New Vanity Unit

Keep your new vanity looking great with these simple cleaning tips:

Preventing Water Damage

Regularly wiping down water residue from the top of your vanity will prevent damage and keep it looking cleaner for longer. It's worth noting that countertop units are more susceptible to water damage.

Regular Clean

If your unit has a basin, you can regularly clean this with warm soapy water and a soft cloth to prevent stains on the surface. Small marks on the ceramic can also be cleaned with our Cramer ceramic polish.

Marks & Stains

We recommend investing in wall mounted soap dishes and dispensers to keep bathroom essentials tucked away. Electric toothbrushes and tumblers are likely to leave ring marks on the surface of your vanity unit.

Deep Clean

Limescale and ring marks on the surface can usually be removed with a damp, soft cloth. For best results, use a warm microfibre cloth, rinsing and repeating to give a thorough clean.

Avoid Using



To keep your vanity unit squeaky clean, there are a few things you should avoid using:

Abrasive Tools

Abrasive brushes such as scouring pads, iron wool and even toothbrushes can cause damage to the surface of your sink. Always clean with soft sponges or cloths.

Harsh Chemicals

Stay away from bleach and harsh chemical cleaners that contain substances like hydrochloric and sulphuric acid as these can damage the finish of your brand new sink. You should also avoid using bicarbonate of soda and vinegar as these can leave marks on the surface.

